



**2001H Series
Peristaltic Chemical Feed Pump**

Installation and Operation Manual



2001H Series

Peristaltic Chemical Feed Pump



May 2017

Flomotion Systems, Inc.
165 Creekside Drive, Suite 112
Buffalo, NY 14228-2103
info@flomotionsystems.com
Toll Free: (800) 909-3569
Tel: (716) 691-3941
Fax: (716) 691-1253

TABLE OF CONTENTS

Table of Contents

1.0 - SYSTEM OVERVIEW.....4

1.1 SAFETY.....4

1.2 WARRANTY.....4

1.3 RECEIVING.....5

1.4 CUSTOMER MODIFICATION.....5

1.5 INFORMATION FOR RETURNING PUMPS5

2.0 – 2001H SERIES PUMP AND PUMPHEAD.....6

2.1 TUBING, SPINDLE AND COVER INSTALLATION.....7

2.2 MOUNTING PUMP ON GEARBOX, INSTALLATION OF COLLET.....8

2.3 PUMP MOUNTING AND COLLET INSTALLATION PROCEDURE.....9

2.4 TUBE AND ROLLER INSTALLATION.....10

2.5 TUBING & CONNECTIONS.....16

Tubing and Accessory Part Numbers.....17

3.0 – 2001H MOTOR & GEARBOX.....18

3.1 MOTOR SPECIFICATIONS.....18

3.3 GEARHEAD SPECIFICATIONS.....18

4.0 – K4 SERIES PUMP CONTROLLER.....19

4.1 OPERATION AND WIRING.....19

4.2 PROGRAMMING19

4.3 INTERFACING TO THE 2001H K4 SERIES PUMP CONTROLLER.....20

5.0 - 2001 SERIES TUBING RUPTURE DETECTOR.....21

RUPTURE DETECTOR SYSTEM OVERVIEW.....21

5.1 ALARM CAUSES.....21

5.2 WHAT TO DO IN AN ALARM CONDITION.....21

5.3 RESETTNG THE ALARM.....21

5.4 RESUMING SERVICE.....21

1.0 - System Overview

The 2001H Series Chemical Feed Pump consists of a controller, motor, gearbox and peristaltic pump.



Model 2001H
with wall mount controller.



Model 2001H
with pump-mounted controller

1.1 Safety

In the interests of safety, this pump and the tubing selected should only be used by competent, suitably trained personnel after they have read and understood this manual, and considered any hazard involved. Any person who is involved in the installation or maintenance of this equipment should be fully competent to carry out the work.

Maintenance and repair should be performed by qualified personnel only. Make sure that no voltage is applied while work is being carried out on the pump or motor. The motor must be secured against accidental start up.

1.2 Warranty

Flomotion Systems, Inc. warrants the 2001 Series pumps to be free of defects in material and workmanship for a period of eighteen months from the date of sale to the user, or two years from the date of shipment, whichever ever occurs first. An MC Series control, or any component contained therein, which under normal use becomes defective within the stated warranty time period, shall be returned to Flomotion Systems, Inc., freight prepaid, for examination (contact Flomotion Systems, Inc. for authorization prior to returning any product). Flomotion Systems, Inc. reserves the right to make the final determination as to the validity of a warranty claim, and sole obligation is to repair or replace only components, which have been rendered defective due to faulty material or workmanship. No warranty claim will be accepted for components which have been damaged due to mishandling, improper installation, unauthorized repair and/or alteration of the product, operation in excess of design specifications or other misuse, or improper maintenance. Flomotion Systems, Inc. makes no warranty that its products are compatible with any other equipment, or to any specific application, to which they may be applied and shall not be held liable for any other consequential damage or injury arising from the use of its products. This warranty is in lieu of all other warranties, expressed or implied. No other person, firm or corporation is authorized to assume, for Flomotion Systems, Inc., any other liability in connection with the demonstration or sale of its products.

1.3 Receiving

Inspect all cartons for damage, which may have occurred during shipping. Carefully unpack equipment and inspect thoroughly for damage or shortage. Report any damage to carrier and/or shortages to supplier. All major components and connections should be examined for damage and tightness, with special attention given to PC boards, plugs, knobs and switches.

1.4 Customer Modification

Flomotion Systems, Inc., its sales representatives and distributors, welcome the opportunity to assist our customers in applying our products. Many customizing options are available to aid in this function. Flomotion Systems, Inc. cannot assume responsibility for any modifications not authorized by its engineering department.

1.5 Information for Returning Pumps


Equipment that has been contaminated with, or exposed to, body fluids, toxic chemicals or any other substance hazardous to health must be decontaminated before it is returned to Flomotion Systems or its distributor.

A certificate included at the rear of these operating instructions, or signed statement, must be attached to the outside of the shipping container.

This certificate is required even if the pump is unused. If the pump has been used, the fluids that have been in contact with the pump and the cleaning procedure must be specified along with a statement that the equipment has been decontaminated.

2.0 – 2001H Series Pump and Pumphead

The 2001H Series pumphead has two spring-loaded working rollers, which automatically compensate for minor variations in tubing wall thickness, giving extended tube life.

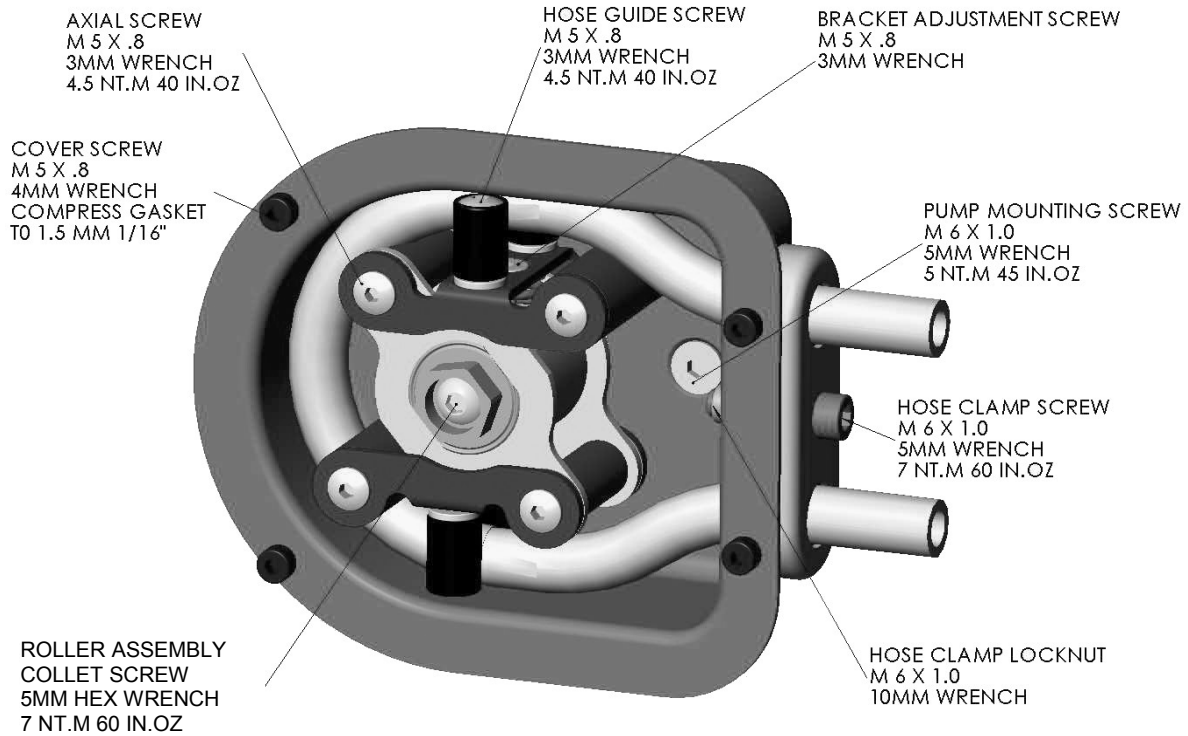


IMPORTANT: The 2001 Series is equipped with a pump cover for safety and protection against chemical spills. The cover must be installed whenever the pump is in use.

2.1 Tubing, Spindle and Cover Installation

! IMPORTANT: Disconnect pump controller from power supply BEFORE changing tubing!


Item No.	Qty	Part No.	Description
1	1	n/a	Pump Body
2	1	100511	Roller Assembly
3	1	100304B	Cover
4	1	100324	Collet Screw
5	1	100305C	Cover Gasket
6	4	100307C	Cover Screw
7	1	varies	Tubing
8	1	Varies with tubing selection*	Tube Seal

*Tube Seal PN	100329	100330	100331	100332	100333	100334

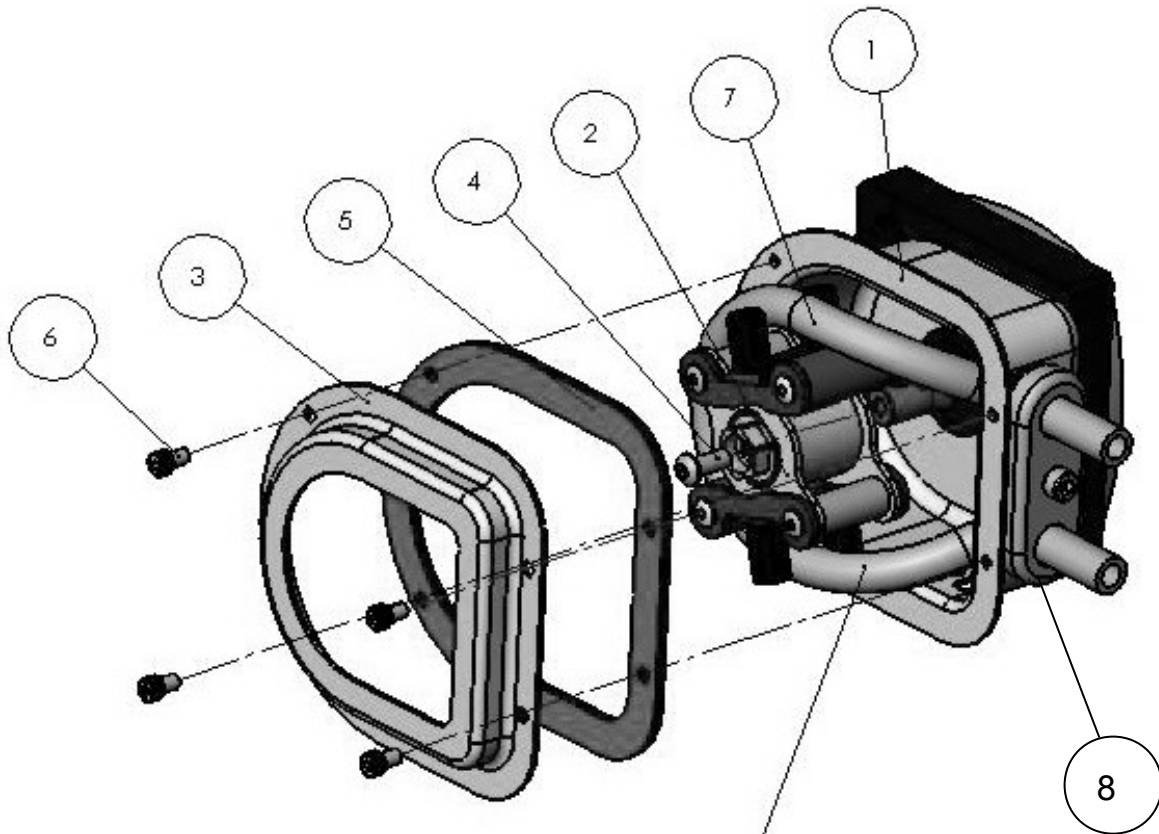

Tubing is shown bent forward out of the pump housing to illustrate the correct tubing and roller assembly position, prior to sliding the tubing and spindle into the housing and over the collet.

2.2 Mounting Pump on Gearbox, Installation of Collet

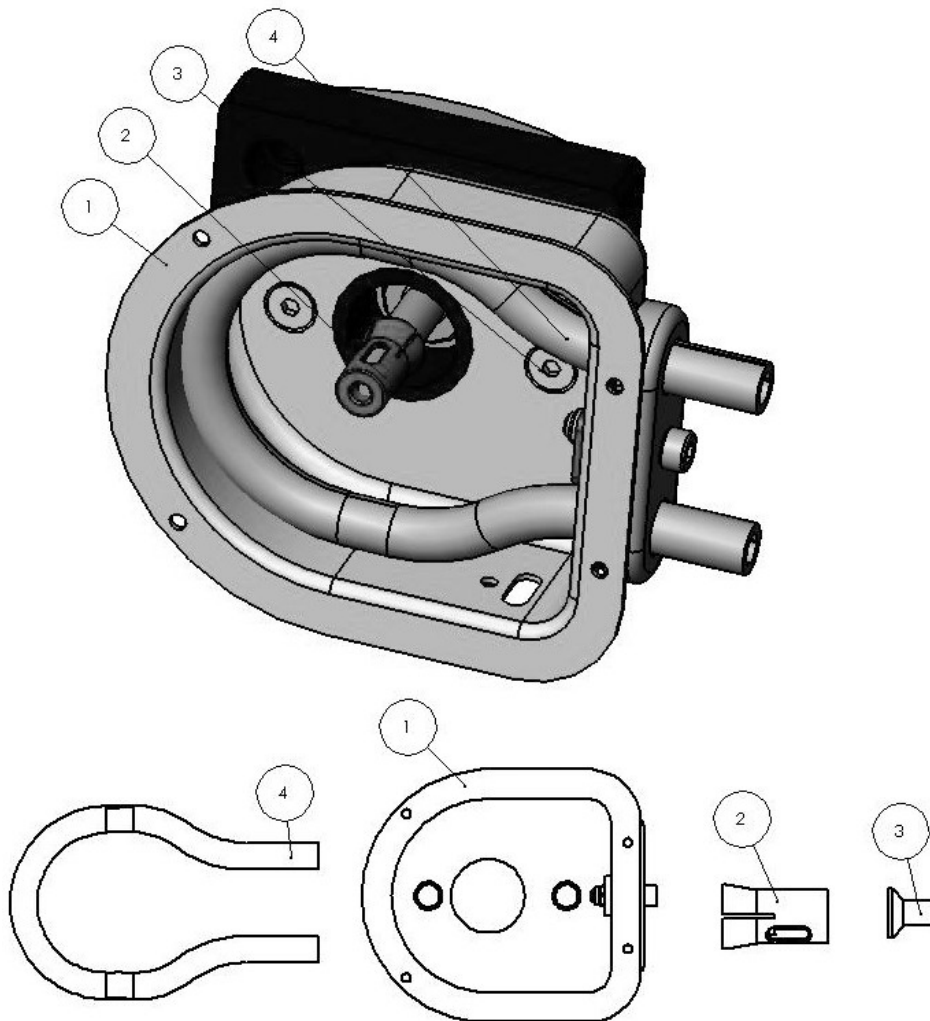

Item No.	Qty	Part No.	Description
1	1	na	Pump Housing with Tube Seal & Tube Seal Cover
2	1	100306	Collet
3	2	100312	Pump Mounting Screws
4	1	na	Tubing

2.3 Pump Mounting and Collet Installation Procedure

1. To install the pump housing on the gearbox, slide it over the central pilot on the gearbox adaptor plate. Next install and torque the mounting screws to 5 NT.M (45 in. oz).
2. Next install the collet on the gearbox shaft. There is a slot in the collet that the flat drive tang on the gearbox shaft must slide into. Orient the collet to allow the drive tang to slide into the slot and push the collet completely onto the gearbox shaft. When the collet bottoms out it is in the correct position.

2.4 Tube and Roller Installation

***! IMPORTANT: Disconnect pump controller from power supply BEFORE changing tubing!
! IMPORTANT Make sure pump suction and discharge lines are completely drained and isolated. Note that the tubing hose seal size must match the selected tubing size.***

Disassembly


1. Remove four (4) 4mm pump cover screws.




2. Loosen Tube Seal Clamp Screw with 5mm hex wrench.




3. Remove 5mm collet screw.

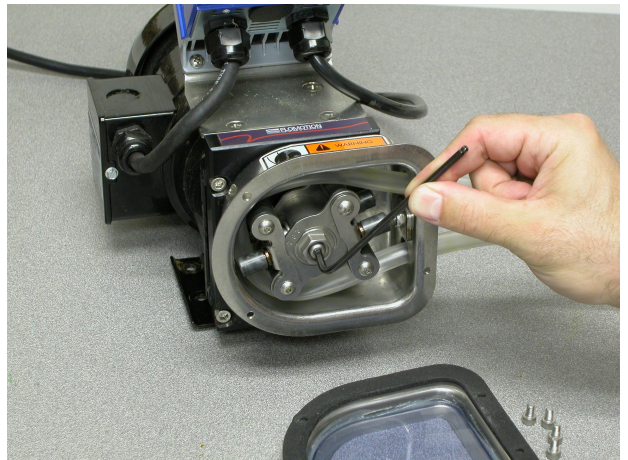

4. Remove the roller assembly.

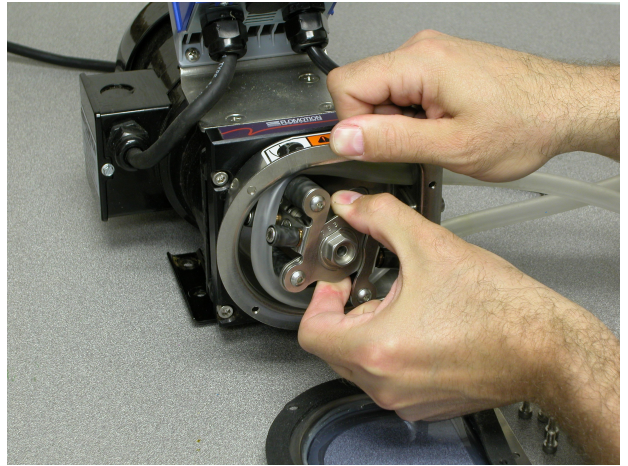


5. Remove worn pump tubing from pumphead.

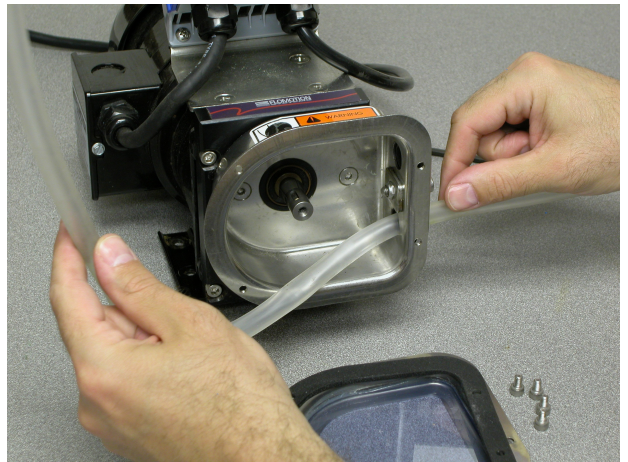

6. Remove and inspect collet for wear. Note that the collet may remain in the roller assembly when the roller assembly is removed from the pump shaft.




- Clean inside of pump housing with damp rag or an appropriate cleaning solution to remove any chemical or tubing residue.

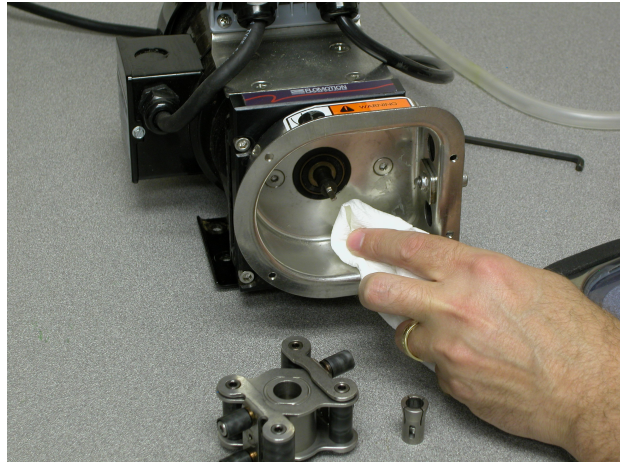


Reassembly

- Reinstall the collet onto the pump shaft.

There is a slot in the collet that the flat drive tang on the gearbox shaft must slide into. Orient the collet to allow the drive tang to slide into the slot and push the collet completely onto the gearbox shaft. When the collet bottoms out it is in the correct position.


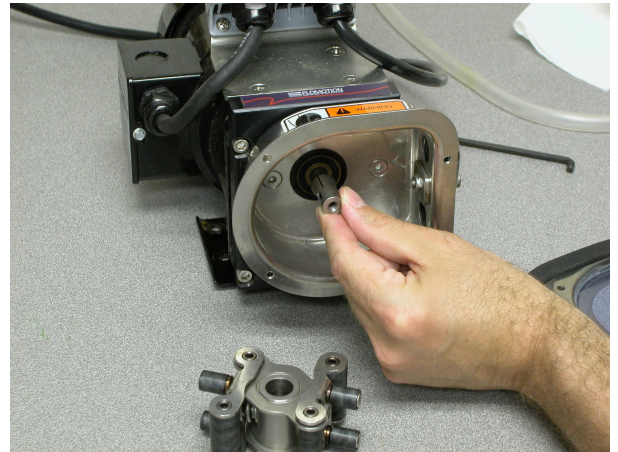


- Mark an 11" section of tubing, which will be the portion, contained within the pump. Leave sufficient excess on the suction and discharge sides of the pump for the desired connections. If you leave the excess intake tubing in a coil near the pump it will make it easy to feed a new section of tubing through the rollers when the section in the pump becomes worn.

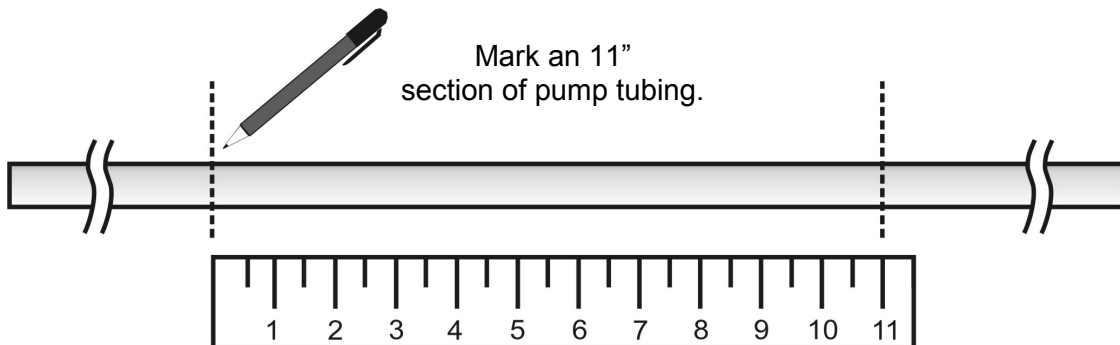


3. Install tubing into the pumphead.


Note: during tubing installation the loop of tubing may develop a twist. Examine the tubing for this condition and if needed turn one end of the tubing where it exits the tubing clamp to eliminate the twist. Correctly adjusted the tubing loop will be flat and parallel to the front face of the pump housing.

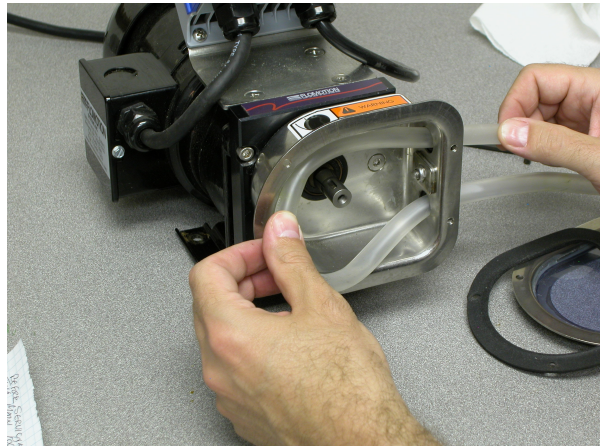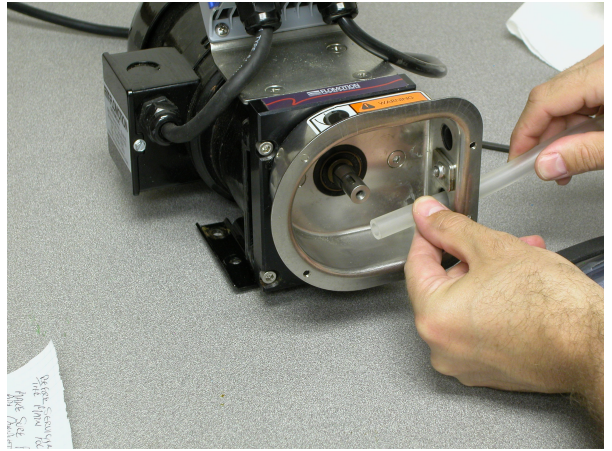


4. Loop tubing around roller assembly between guides as shown. Remove slack in tubing while rotating roller assembly and sliding onto collet.

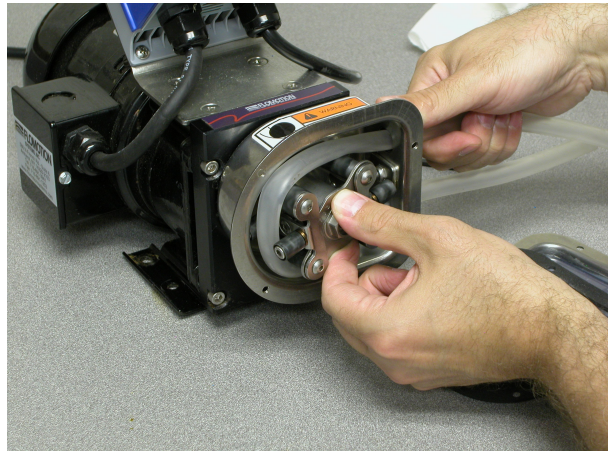


5. Align marks on tubing with outside edge of the tubing Clamp.

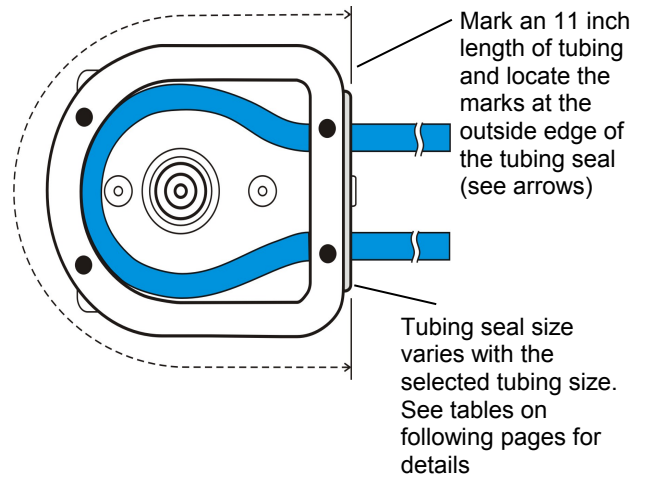


6. Reinstall collet screw firmly.

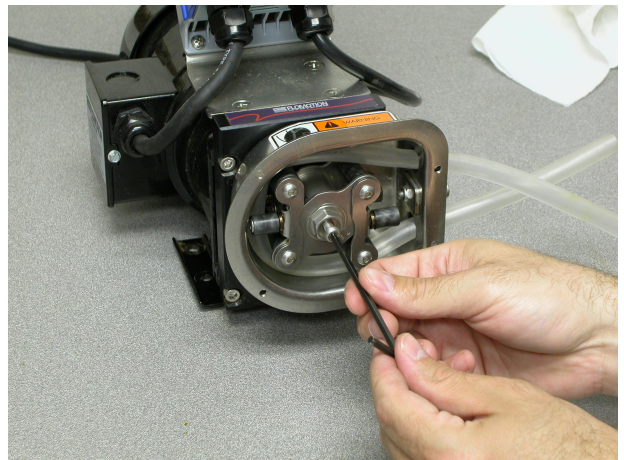

7. Tighten tubing seal clamp screw. Be sure to tighten firmly to prevent "tubing walk." Tubing walk can occur when the tubing seal is the wrong size or is not sufficiently tight to keep the rollers from pulling the tubing through the pump as it rotates.

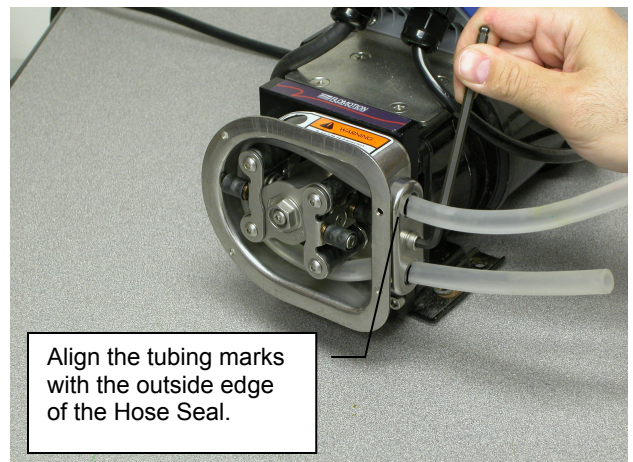


8. Inspect pump cover gasket. Replace if damaged. Reinstall pump cover gasket and cover.

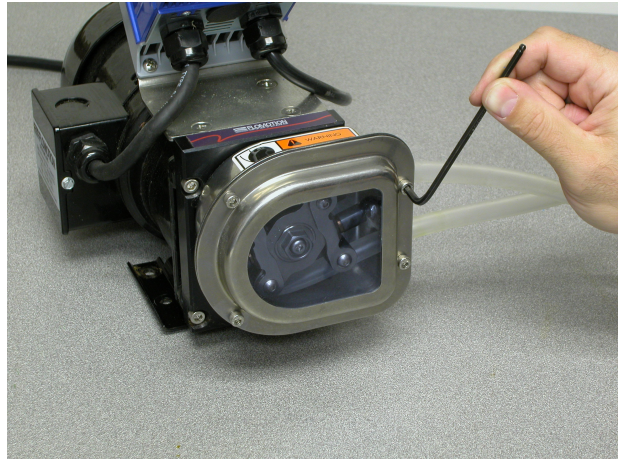

2.5 Tubing & Connections

Tubing adapters are available for many configurations. See the drawing below for details.

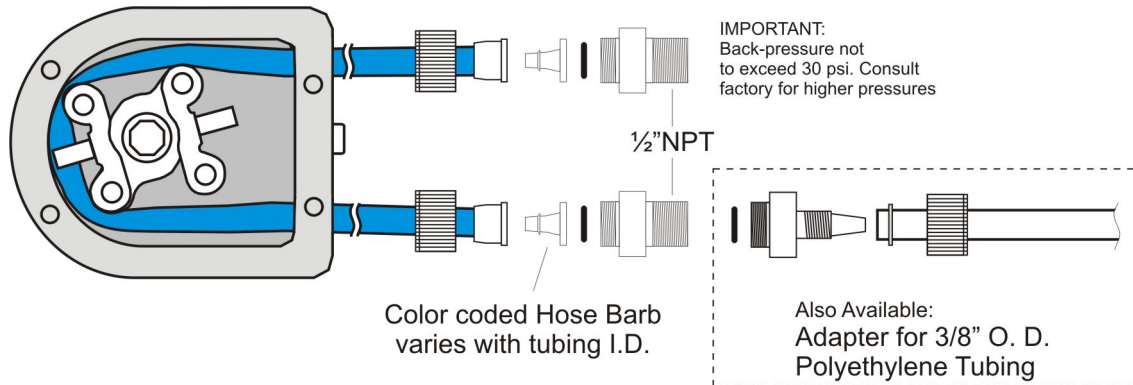

2001H Series Estimated Pumping Capacity*							*Actual flow rates may vary
Tubing No.	#119	#120	#15	#24	#35 & 121	#36 & 122	
Tubing Size	1.6mm bore (1/16")	3.2mm bore (1/8")	4.8mm bore (3/16")	6.4mm bore (1/4")	8mm bore (5/16")	9.6mm bore (3/8")	
ml/min @ 0.6-90 rpm	0.27 - 41 (0.004 - 0.64 gph)	1.13 - 169 (0.02 - 2.68 gph)	2.46 - 369 (0.04 - 5.85 gph)	4.44 - 666 (0.07 - 10.56 gph)	6.60 - 990 (0.10 - 15.69 gph)	8.64 - 1296 (0.14 - 20.54 gph)	
ml/min @ 1.8 - 220 rpm	0.81 - 99 (0.013 - 1.57 gph)	3.38 - 414 (0.05 - 6.56 gph)	7.38 - 902 (0.12 - 14.30 gph)	13.32 - 1628 (0.21 - 25.80 gph)	19.80 - 2420 (0.31 - 38.36 gph)	25.92 - 3168 (0.41 - 50.21 gph)	
ml/rev*	0.45	1.88	4.1	7.4	11	14.4	
Hose Barb Color	Violet	Green	White	Black	Gray	Blue	
Hose Seal PN	100329	100330	100331	100332	100333	100334	

Tubing and Accessory Part Numbers

FLOPRENE TUBING - 50 Ft Length (Santoprene)

FLO.016.024	1.6mm (1/16") bore	100 PSI max	FLO.064.024	6.4mm (1/4") bore	50 PSI max
FLO.032.024	3.2mm (1/8") bore	100 PSI max	FLO.080.024	8.0mm (5/16") bore	30 PSI max
FLO.048.024	4.8mm (3/16") bore	70 PSI max	FLO.096.024	9.6mm (3/8") bore	30 PSI max

CONNECTORS / ADAPTORS

1/2" NPTM x pump tubing (bore as required)
 3/8" PE tubing x pump tubing (bore as required)
 Two-piece Color Coded tubing Barb & Collar Set.


PUMPHEAD tubing SEALS

100329 tubing Seal	1.6mm (1/16") bore	100332 tubing Seal	6.4mm (1/4") bore
100330 tubing Seal	3.2mm (1/8") bore	100333 tubing Seal	8.0mm (5/16") bore
100331 tubing Seal	4.8mm (3/16") bore	100334 tubing Seal	9.6mm 3/8") bore

3.0 – 2001H Motor & Gearbox


3.1 Motor Specifications

- Motor Type: Permanent Split Capacitor or 3-Phase Inverter Duty
- Rotation: Reversible.
- Insulation: Class B minimum
- Finish: Powder-coat gloss black.

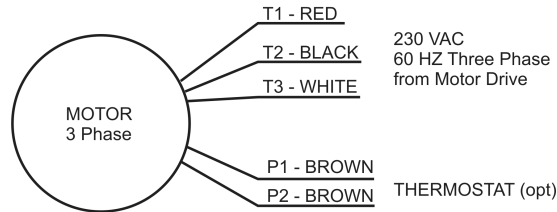

Thermostat signal wires are not used in the 2001H

3.2 2001H Power & Motor Wiring

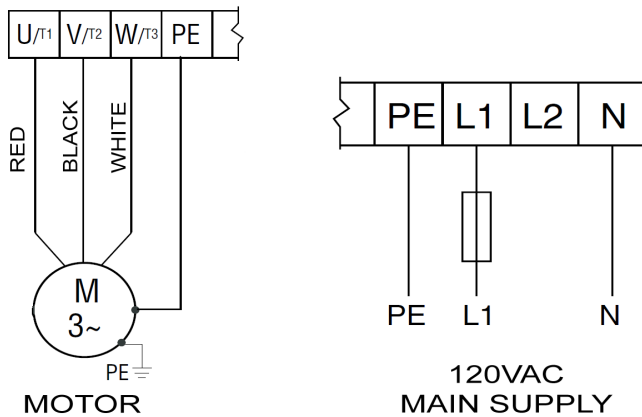

3.3 Gearhead Specifications

- Housing: Precision machined die cast aluminum.
- Lubrication: Lifetime oil bath, sealed and gasketed.
- Shafts: Hardened steel.
- Mounting: Face (any angle) or optional footplate.
- Gearing: AGMA class 9 heat treated steel. 1st stage helical metal, balance spur metal.
- Bearings: Needle with thrust ball.

4.0 – K4 SERIES Pump Controller

4.1 Operation and Wiring

For complete details about the pump controller please refer to the included K4 SERIES (KBDA) Drive Controller Operating Instructions booklet.

Shown here are program settings specific to the operation with the 2001H Series Peristaltic Pump.

4.2 Programming

The K4 SERIES programming differs from the factory defaults shown in the Operating Instruction booklet in relation to the following parameters:


- 0.04 = 0000 GFCI operation disabled
 - 1.00 = 0001 Remote Start/Stop input enabled
 - 1.05 = 0003 Auto restart after power failure or fault
 - 2.01 = 0001 Update speed change w/o having to press ENTER
 - 2.02 = 0002 Local/Remote select input enabled
 - 3.02 = 0100 100Hz Full Scale
 - 4.00 = 0000 Display in Hz
 - 5.00 = 0000 Run Relay output enabled
 - 7.03 = 0010 Remote Start/Stop output enabled
 - 7.04 = 0000 External Local/Remote select input OFF (0013 = ON)
 - 7.06 = 0008 External Fault Input enabled
 - 8.00 = 0001 Fault Relay output enabled
 - 8.01 = 0009 Remote Status Output
 - 9.07 = 0020 4-20mA Input enabled
 - 8.09 = 0002 Enable fault when the 4-20mA output is disconnected*
- 6.05 = 1010 reset to Flomotion Defaults
 - *8.09 = 0000 to avoid fault when 4-20mA Output is disconnected when not using 4-20mA output

Refer to section 4.3 for wiring and program for the above signals and functions.

4.3 Interfacing to the 2001H K4 SERIES Pump Controller



K4 SERIES Motor Drive & I/O Interface

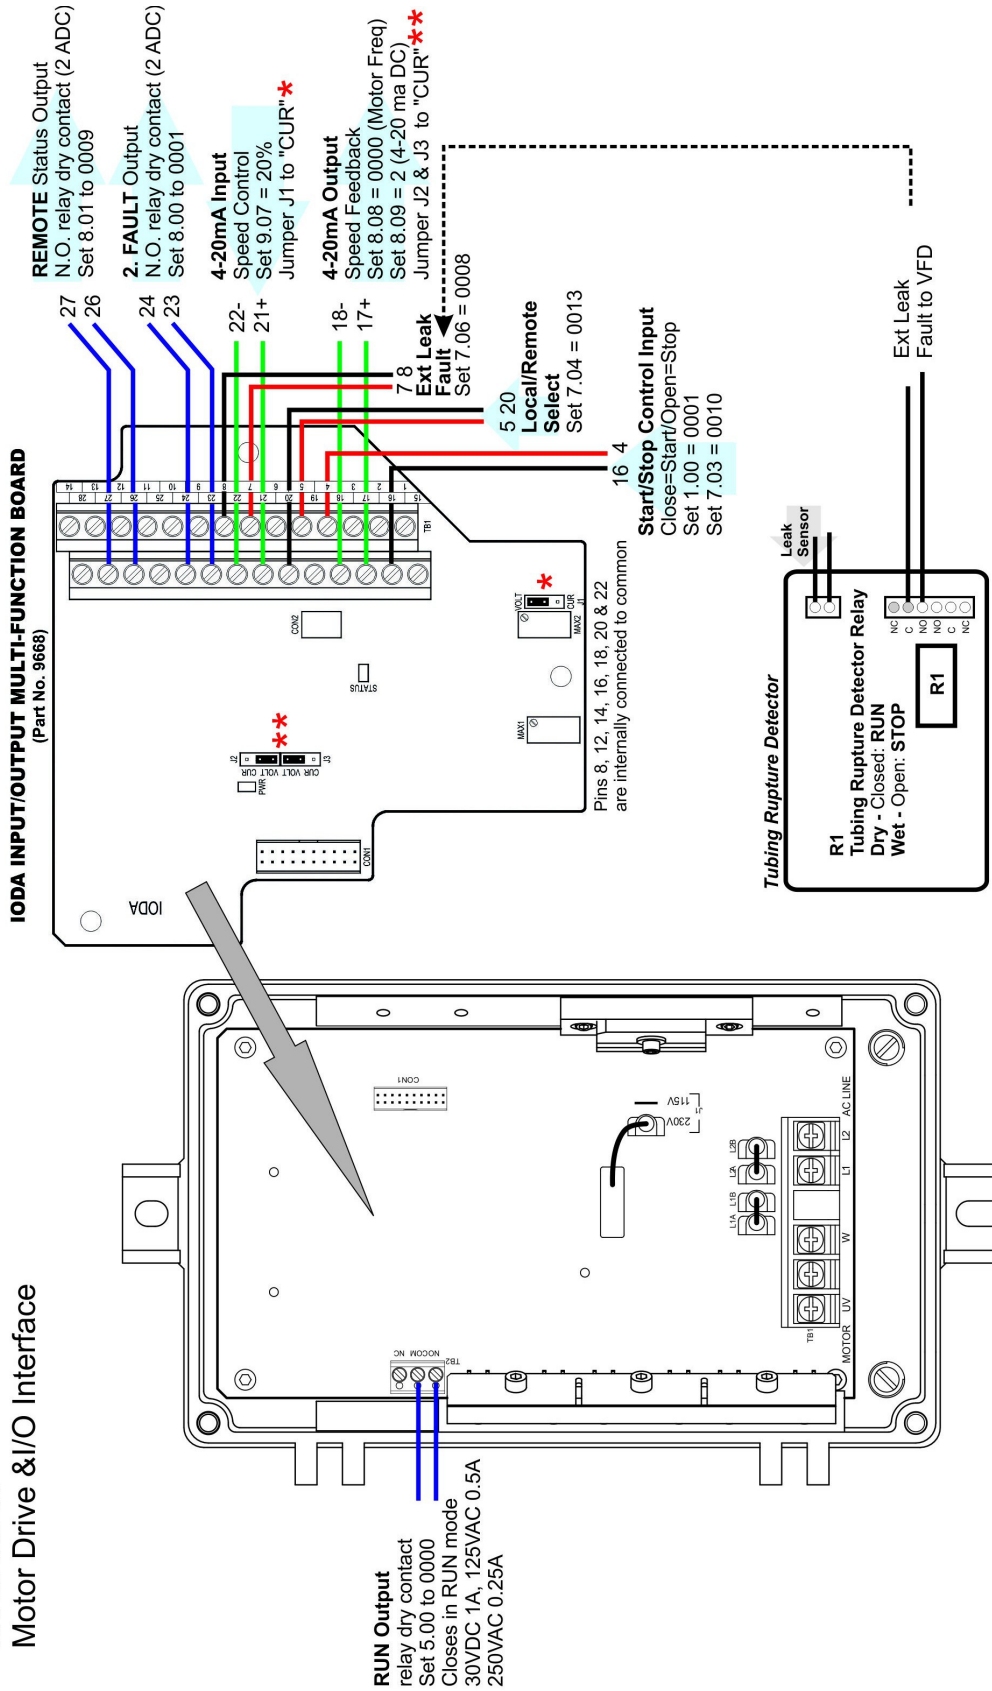


MISC Settings
1.05 = 0003 Auto Restart after power restored or when fault is cleared (except circuit shorts).
2.01 = 0001 Updates speed change without hitting Enter.
2.02 = 0002 Enables Local/Remote switching, disables JOG function.

Note: if 8.09 is set to 0002 for Current Output but no load is attached the drive will fault. Drive may be set to 8.09 = 0000 (0-5VDC output) for testing so no fault will occur.
Change 8.09 back to 0002 for 4-20mA output once a load is attached.

5.0 - 2001 Series Tubing Rupture Detector

Rupture Detector System Overview

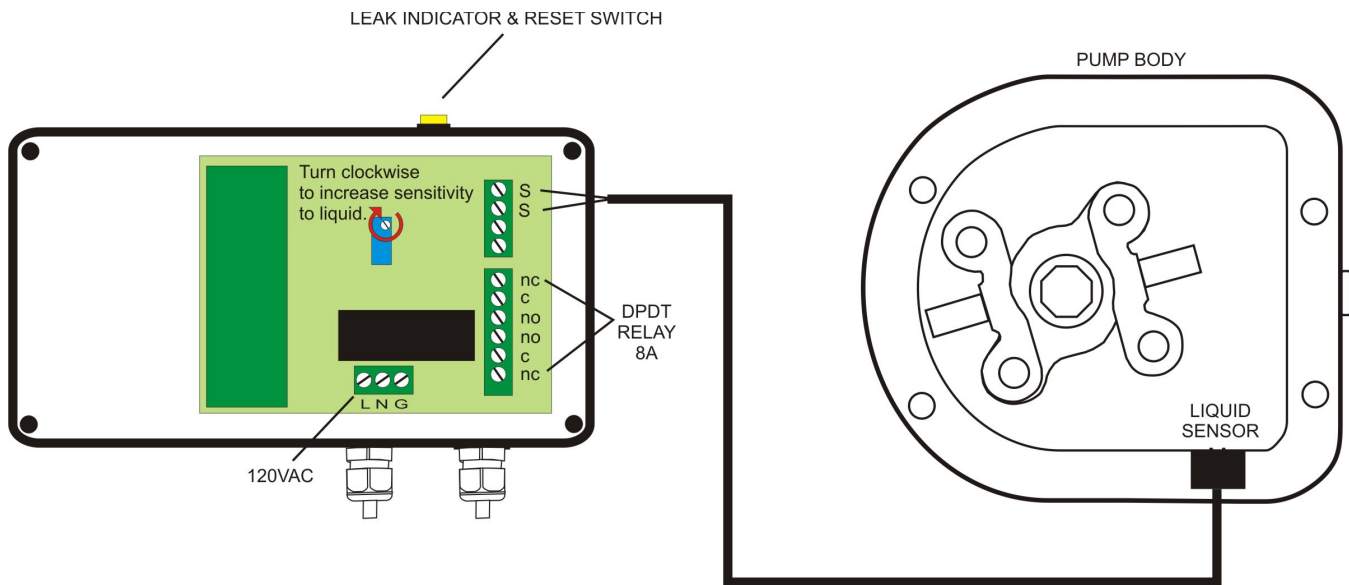

5.1 Alarm Causes

A rupture alarm is triggered by the presence of a conductive fluid in the pump. When the fluid bridges the two stainless steel electrodes on the LIQUID SENSOR the alarm is triggered.

5.2 What to do in an alarm condition

To clear the alarm, first stop the pump and disconnect power from the pump controller. Remove the pump cover and remove the ruptured pump tubing. Clean the inside of the pump with a soft rag. Remove any liquid or tubing debris from the inside of the pump and the area around the LIQUID SENSOR. Inspect rollers and clean if necessary.

5.3 Resetting the alarm

Press the yellow pushbutton (LEAK INDICATOR & RESET SWITCH) on the top of the Tubing Rupture Detector to reset the alarm.

! IMPORTANT: Resetting the Tubing Rupture Detector will cause the pump to resume turning !
! ALWAYS reinstall the pump cover BEFORE resetting the tubing rupture detector !

5.4 Resuming Service

Install a fresh tubing insert and the pump is ready to resume service.

Notes